




F12 Transmission Control Unit L

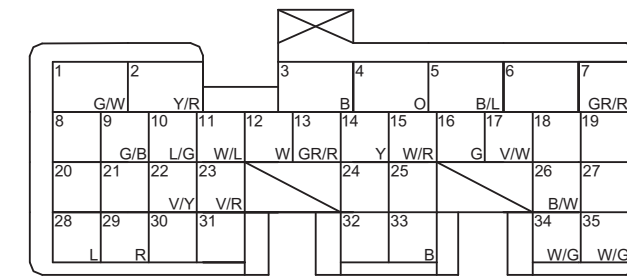


F11 Transmission Control Unit R

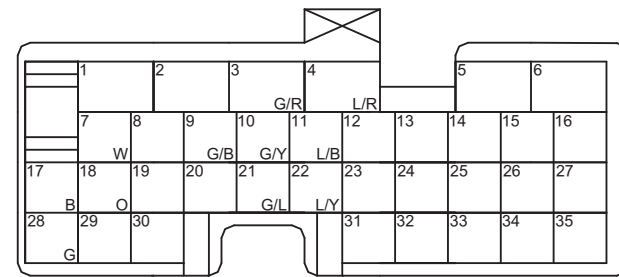


F25 Multi-function Switch

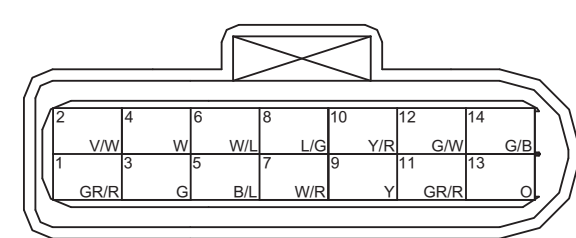


F26 Oil Temperature, Speed Sensor

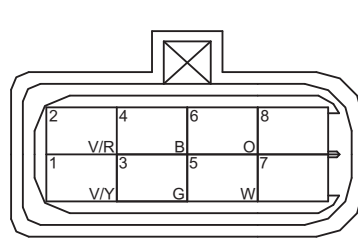


I38 Ignition Switch Solenoid

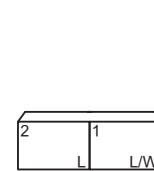


R33 Shift Switch

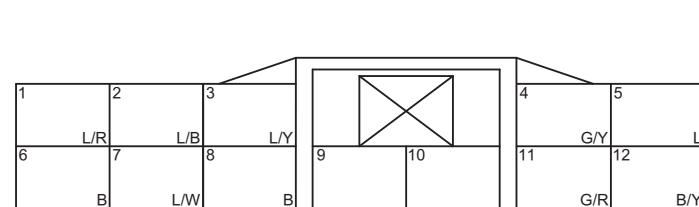

F19 Select Position Switch (1.8T)

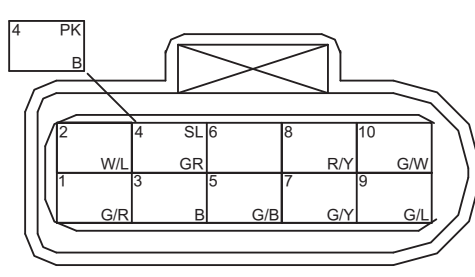

F20 Select Position Switch (2.0L)

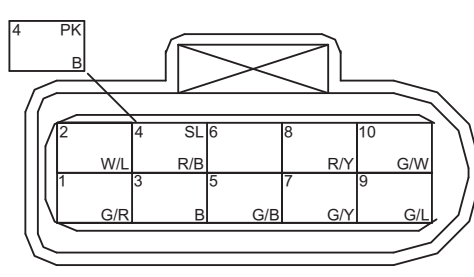

F15 Reverse Switch

