



F51 Transmission Control Unit A

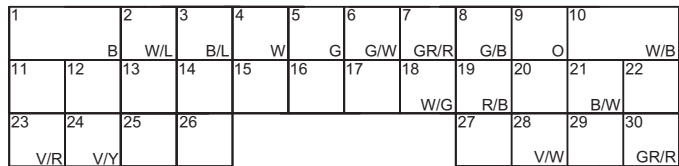


F52 Transmission Control Unit B

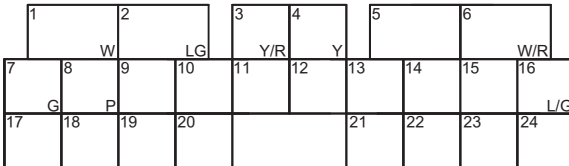


F53 Transmission Control Unit C



F50 DC/DC Converter

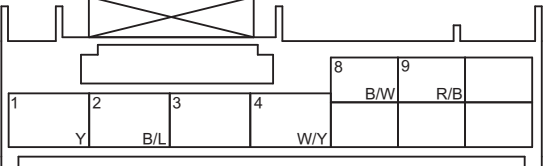


F23 Select Position Switch (1.8TD)

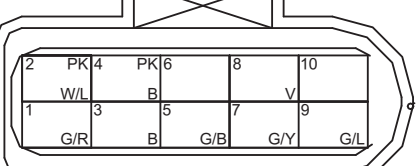


F28 Multi-function Switch




F34 Oil Temperature, Speed Sensor

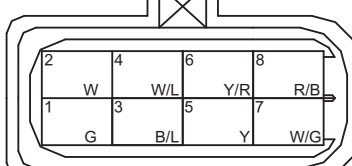

I38 Ignition Switch Solenoid

 

R33 Shift Switch

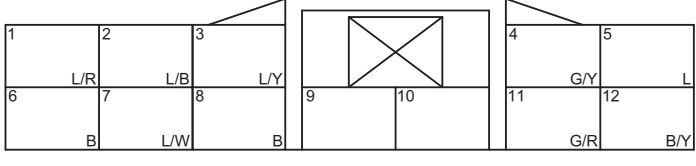

F54 Battery Sensor

