


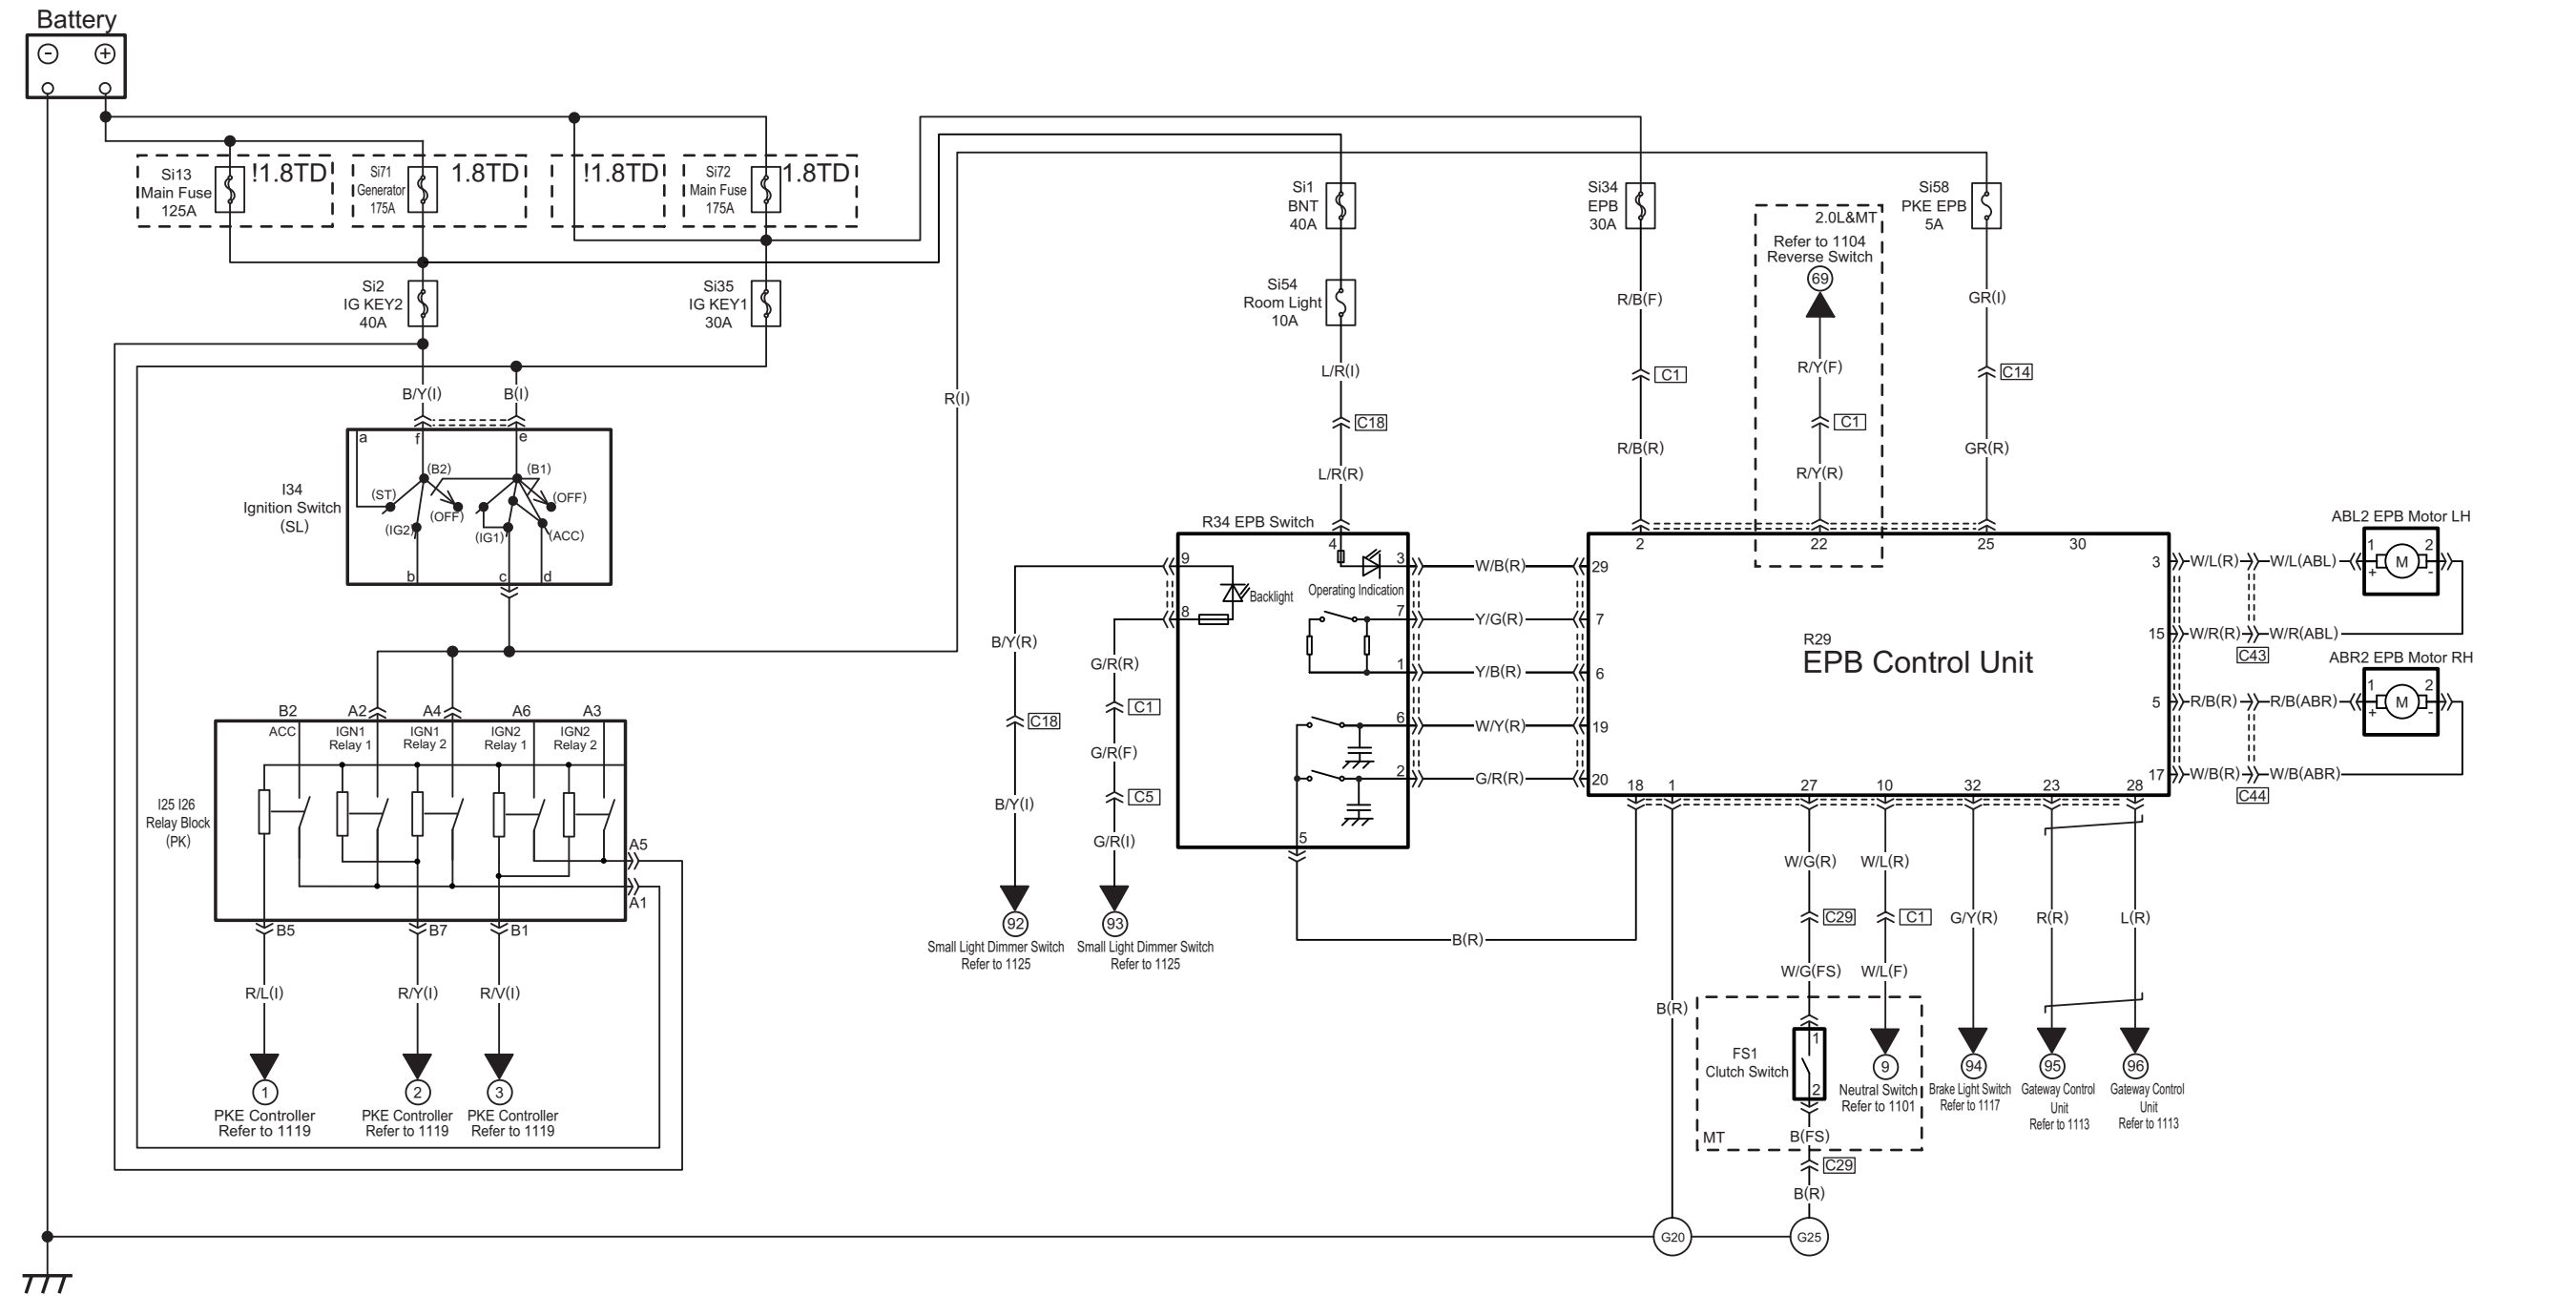


R29 EPB Control Unit

11	12	13	14	15	16	17	18	19	20	21	22	MT	28	29	30	31	32									
1		2		3	W/R	4	5	W/B	6	B	7	W/Y	8	G/R	9	10	R/Y	23	L	24	W/B	25	26	27	MT	G/Y
		B		R/B	W/L		R/B	Y/B	Y/G			W/L		R		GR										W/G


R34 EPB Switch

5	4	3	2	1	
	B	L/R	W/B	G/R	Y/B
10	9	8	7	6	
		B/Y	G/R	Y/G	W/Y

 FS1 Clutch Switch



ABL2 EPB Motor LH

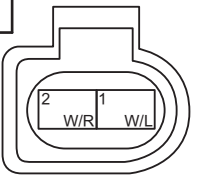

ABR2 EPB Motor RH

