




I16 PKE Controller A

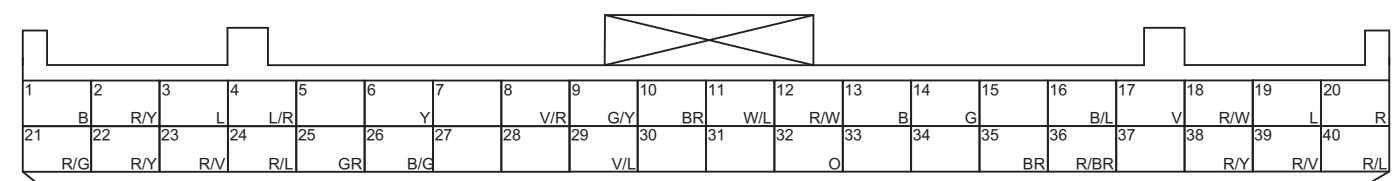


R26 PKE Controller B

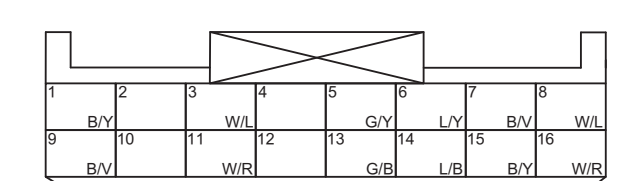


R27 PKE Controller C

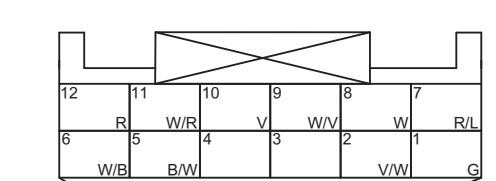


I17 PKE Controller D

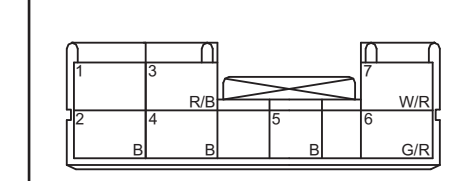


I25 PKE Relay Block A

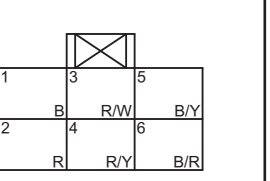


I26 PKE Relay Block B

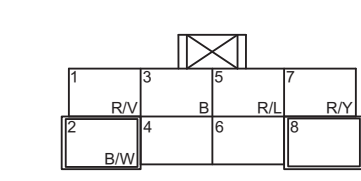


DR1 PKE Antenna A

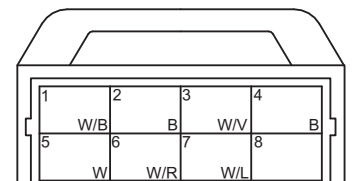


DR2 PKE Antenna B

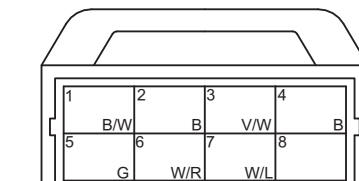


S1 PKE Antenna 4

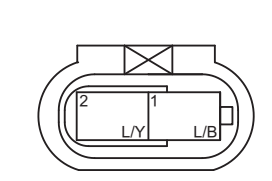


I22 PKE Antenna 1

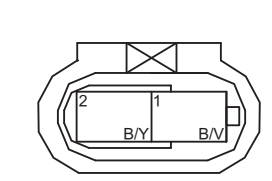


AI1 PKE Antenna 2

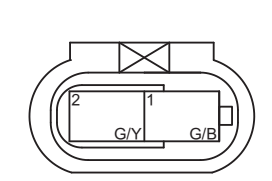

R12 PKE Antenna 3

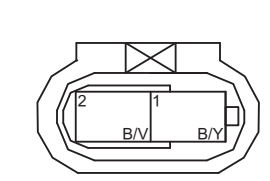

I5 Engine Switch

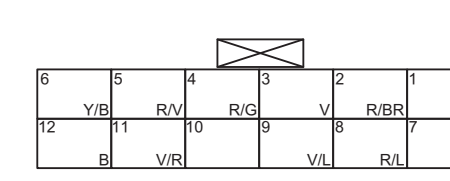

I27 Electrical Steering Column Lock

